signshark

CANOPY TENTS

ONE CHOICE - 10 FT. CANOPY PRODUCT CODE: OC-CASTL-CST10

Step 1

Take your frame and slightly expand it to expose the corner bars.



Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.







Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole.





Step 2

Take your canopy graphic and place it on top of the frame.

Step 5

Increase the height by extending the lower legs.



Step 8

The dome cap will push out the canopy, creating tension to flush out any loose areas.




Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of Hook and Loop sewn to it.

sıgnshark

SIC

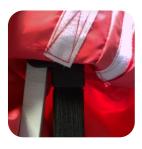

Step 6 Pull each leg down until the latch locks into place.



Step 9 The install is complete.



Scan QR Code To View More Resources.